

Radio keypad with visual interaction and INSTALL&GO start-up

# icmtechnologies

# quick guide INSTALLER KEEpad



· MOTION keyboard, 3 channels 868 MHz · · IP65 · 3 batteries AAA 1.5V ·

· Autonomy: 2 years/6000 activations · -20 / +55 °C



### Description

3-channel motion transmitter; 3 different functions (open door, switch on courtesy light, ...).

Each of these channels is activated with a different password.

#### Installation



Remove plastic from batteries



Fix support



Save master code label in a safe place



Slide on wall support





Screw back cover



Fix device (use provided tool)

Do not install near transmitting equipment of radiofrequency (i could decrease the battery life time).



## **Programming**





Enter programming mode in receiver



Wake up



Enter the channel password to be programmed + OK

The default passwords are: 1111 for channel 1, 2222 for channel 2 and 3333 for channel 3.

#### Reset



Enter configuration mode



Select reset (@)



Enter master code (see yellow label +OK

Paste he the mast code lab



After a correct master code ( the default passwords are restored and, for safety, the keypad is reset from the receiver (it must be reprogrammed).

### Problem solving

See our website for troubleshooting: https://www.jcm-tech.com/JCM/keepad-keepush

# **EC Declarations of Conformity**

The manufacturer JCM TECHNOLOGIES declares that the product KEEPAD complies with the relevant fundamental requirements of the RED Directive 2014/53/EU and of the RoHS Directive 2011/65/EU.

JCM TECHNOLOGIES, SA · COSTA D'EN PARATGE, 6B - 08500 VIC (BARCELONA) SPAIN

See web page www.jcm-tech.com/declarations/





Radio keypad with visual interaction and INSTALL&GO start-up

# icmtechnologies

# quick guide USER KEEpad



· MOTION keyboard, 3 channels 868 MHz · · IP65 · 3 batteries AAA 1.5V ·

· Autonomy: 2 years/6000 activations · -20 / +55 °C



### Configure password



Wake up



Enter configuration mode



Enter new password (4-8 digits + OK)





Choose channel (1,2 or 3)

If you do not remember the current password, you must reset the device (see the installer guide)

# Problem solving

Enter current password (4-8 digits + OK)

See our website for troubleshooting:

www.jcm-tech.com/JCM/keepad-keepush/

	MY PASSWORD	BY DEFAULT
CHANNEL 1		1111
CHANNEL 2		2222
CHANNEL 3		3333

#### Normal use







Enter password + OK

After 3 wrong trials the for 2 minutes.

system is locked

The anti-spy feature allows you to press random numbers before entering the password: the keypad only uses the last digits





Unscrew device and slide on wall support



Unscrew back cover



Replace batteries (3 x 1.5Vdc AAA type)

When batteries are near to the end of its useful life time the  $\triangle$  indicator flashes.

# **EC Declarations of Conformity**

The manufacturer JCM TECHNOLOGIES declares that the product KEEPAD complies with the relevant fundamental requirements of the RED Directive 2014/53/EU and of the RoHS Directive 2011/65/EU.

JCM TECHNOLOGIES, SA · COSTA D'EN PARATGE, 6B - 08500 VIC (BARCELONA) SPAIN

See web page www.icm-tech.com/declarations/

