jcmotech
technology & imagination

BLUE PAD

User Manual

EN

Table of contents

Introduction 3
Accessories 4
Installation 5
Batteries 6
Configuration 7
Pairing the keyboard 7
Generating codes 8
Managing codes 9
Operating 10
Maintenance 11
Unpair the keyboard 11
Reset to factory settings 11
Solving problems 12
FAQs 12
Note 13
Technical Data 16
Use of the equipment 16
Regulatory Data 16
EU Declaration of conformity 16

Introduction

BLUE PAD is a wireless keyboard used to activate a BLUE OPENER or BLUE OPENHAND device via Bluetooth.

You may view device operation and installation videos at: www.jcm-tech.com/JCM/blue

Accessories

Keyboard x 1

Mounting plate x 1

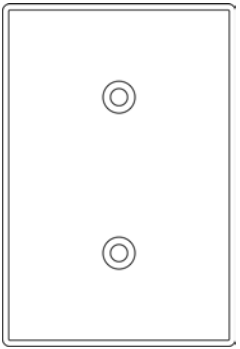

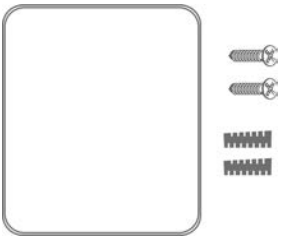

Double-sided adhesive tape x 1

Screws x 2

Wall plugs x 2

Installation

- If the mounting surface is flat and smooth, please use the double-sided tape to affix the keyboard. In this case, the mounting plate is not necessary.
- If the mounting surface is not suitable or you wish to install the mounting plate, follow the instructions below:

Mark the position of the holes required by the mounting plate on the wall and drill the holes according to these marks. Fit the plugs into the wall to enable you to screw the mounting plate in place.

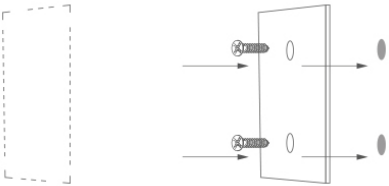

Stick the double-sided tape to the back of the keyboard and then stick the keyboard onto the mounting plate.

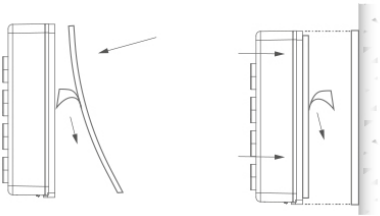

Batteries

Remove the screw, press the release-tab and then remove the battery holder from inside.

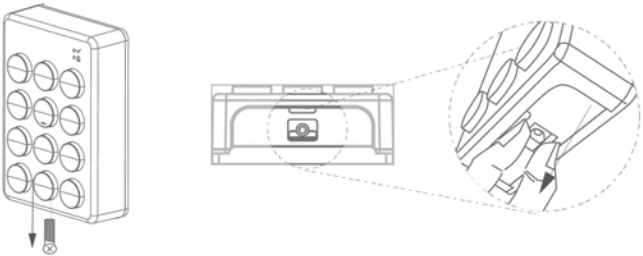

Insert four AAA type batteries into the holder, noting the correct polarity, and then place the battery holder back into the keyboard. Replace the screw.

Configuration

Pairing the keyboard

Once successfully installed, the equipment needs to be configured.

In the "**Blue Open**" app, select the configuration button for the BLUEOPENER or the BLUEOPENHAND that you want to activate with the BLUEPAD and press "Wireless keypad".

If the device has not been paired before, press any key to activate it.

If the device has already been paired, type ***529#** to activate pairing mode.

Select the device in the app to pair the keyboard.

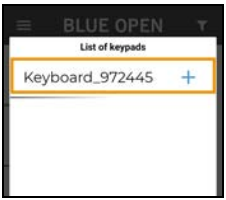

Generating codes

Once the keyboard is connected, you can generate codes to activate the paired BLUE OPENER or BLUEOPENHAND.

In the "**Blue Open**" app, select the BLUEOPENER or BLUEOPENHAND configuration button linked to the BLUEPAD and press "Custom passcodes".

Start date and end date: You can set the start date and end date, but only in **Temporary** mode.

Passcode: enter a code between 4 and 8 digits.

Add periodicity: select days and hours.

Once the fields have been completed, press "Generate" and give the code a name.

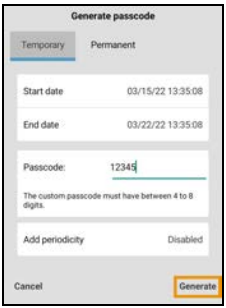

Managing codes

When one or more codes have been generated, they can be managed.

In the "**Blue Open**" App, select the BLUEOPENER or BLUEOPENHAND configuration button linked to the BLUEPAD and press "Manage passcodes".

The app will show the list of active codes. A code can be deleted by clicking on the trash can icon.

Operating

Enter a code followed by "#" on the BLUEPAD.

If the code is correct, the LED will turn green for 2 seconds and the unit will emit a long beep.

The paired BLUEOPENER or BLUEOPENHAND device will be activated.

If the code is incorrect, the LED will turn red for 2 seconds and the unit will emit 4 short beeps.

If the device does not activate, check the following:

- The code you entered is correct and is within the defined time zone
- All the devices are powered

Maintenance

Unpair the keyboard

In the "**Blue Open**" app, select the configuration button of the BLUEOPENER or of the BLUEOPENHAND paired to the BLUEPAD and press and hold "Wireless keypad". When asked to disconnect, press "YES".

Reset to factory settings

Remove the back of the keyboard case.

Press the reset button for 3 seconds until you hear a beep.

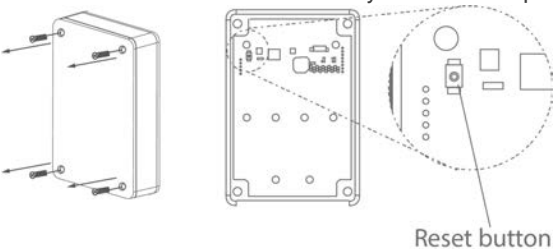

Solving problems

FAQs

Q: How many BLUE OPENER and/or BLUE OPENHAND can be linked at the same time?
A: Only one

Q: What is the maximum range to activate the device?
A: Up to 10 meters, obstacle-free.

Q: I can't set up my BLUE OPENER / BLUE OPENHAND
A: Only the owner of the BLUEOPENER or BLUEOPENHAND can set the devices to open with the BLUE PAD.

Q: How many codes can be generated?
A: Up to 150 codes

Q: Sometimes I get an error message when generating a code with periodicity
A: The device must have a BLUEOPENWAY paired to generate a refreshed custom code. (Add periodicity). Check that you are within Bluetooth range and that the equipment is powered.

Note

Note

Note

Technical Data

Parameter	Value
Size	67.7 x 96.3 x 29.9 mm
Batteries	4 AAA alkaline batteries
Voltage	3V
Consumption at rest	<10µA

Use of the equipment

The manufacturer reserves the right to change the device specifications without warning. No liability can be accepted for errors and misprints.

Regulatory Data

EU Declaration of conformity

The manufacturer **OMNITEC SYSTEMS S.L.** declares that the product **BLUE PAD** complies with the relevant fundamental requirements of the RED Directive 2014/53/EU and of the RoHS Directive 2011/65/EU.
See website https://www.jcm-tech.com/declarations/

OMNITEC SYSTEMS S.L.
Ctra. N-II, Km.333, c\ Tamariz 9
50171 La Puebla de Alfinden, Zaragoza
ESPAÑA

UM_3201822_BLUE-PAD_EN_Rev00